 


720 & 720B SERIES

EMERGENCY RESCUE ACCESS-1

1 ENTRY DOOR EXTERNAL
HANDLE

TO OPEN DOOR:


1. PULL HANDLE OUTWARD.
2. ROTATE CLOCKWISE.
3. PULL DOOR OUTWARD.

WARNING: PASSENGER AND SERVICE DOORS, SLIDE MAY AUTOMATICALLY DEPLOY WHEN DOORS ARE OPENED FROM OUTSIDE.

NOTE: CUT-IN AREAS REQUIRE METAL CUTTING PORTABLE POWER EQUIPMENT. BECAUSE OF TYPE OF STRUCTURE AND POSSIBLE INJURY TO PERSONNEL WITHIN, IT IS RECOMMENDED THAT MAJOR EFFORT TO GAIN ACCESS BE DIRECTED TO HATCHES AND DOORS. URGENCY OF SITUATION WILL DICTATE THE NECESSITY FOR A CUT-IN.



720 & 720B SERIES

EMERGENCY RESCUE ACCESS-2

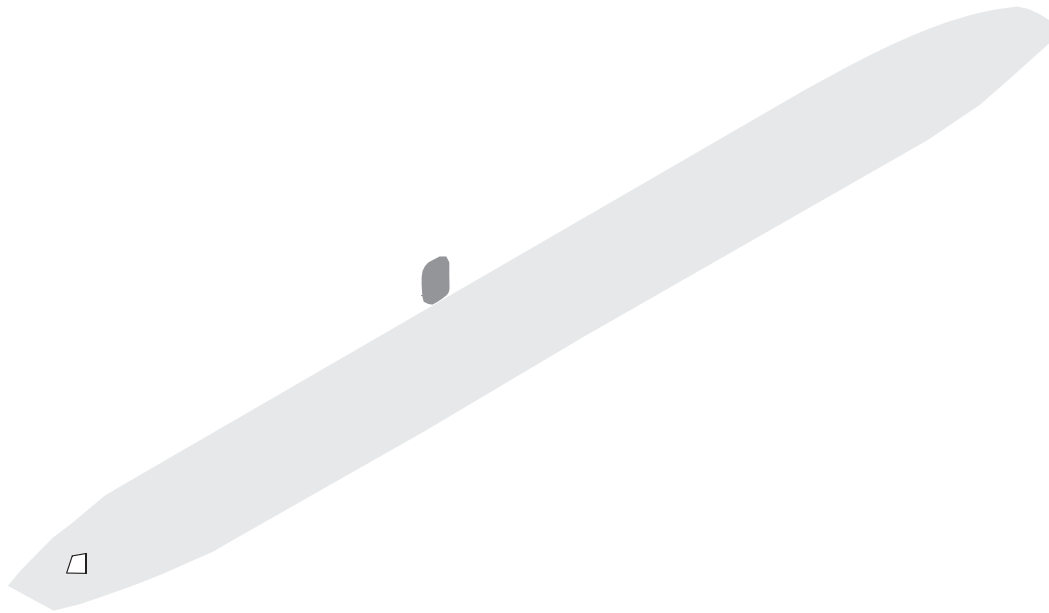


720 & 720B SERIES

BATTERY LOCATIONS

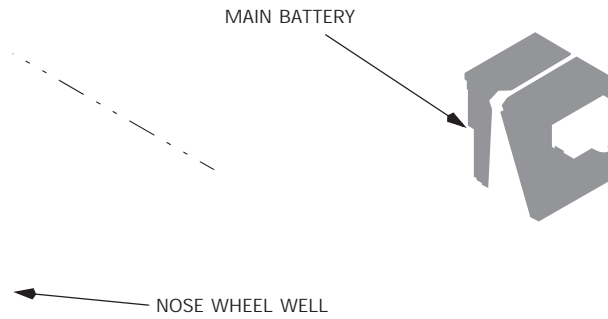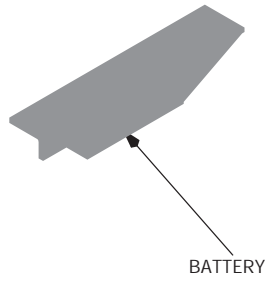

720 & 720B SERIES

FLIGHT DECK CONTROL SWITCH LOCATIONS

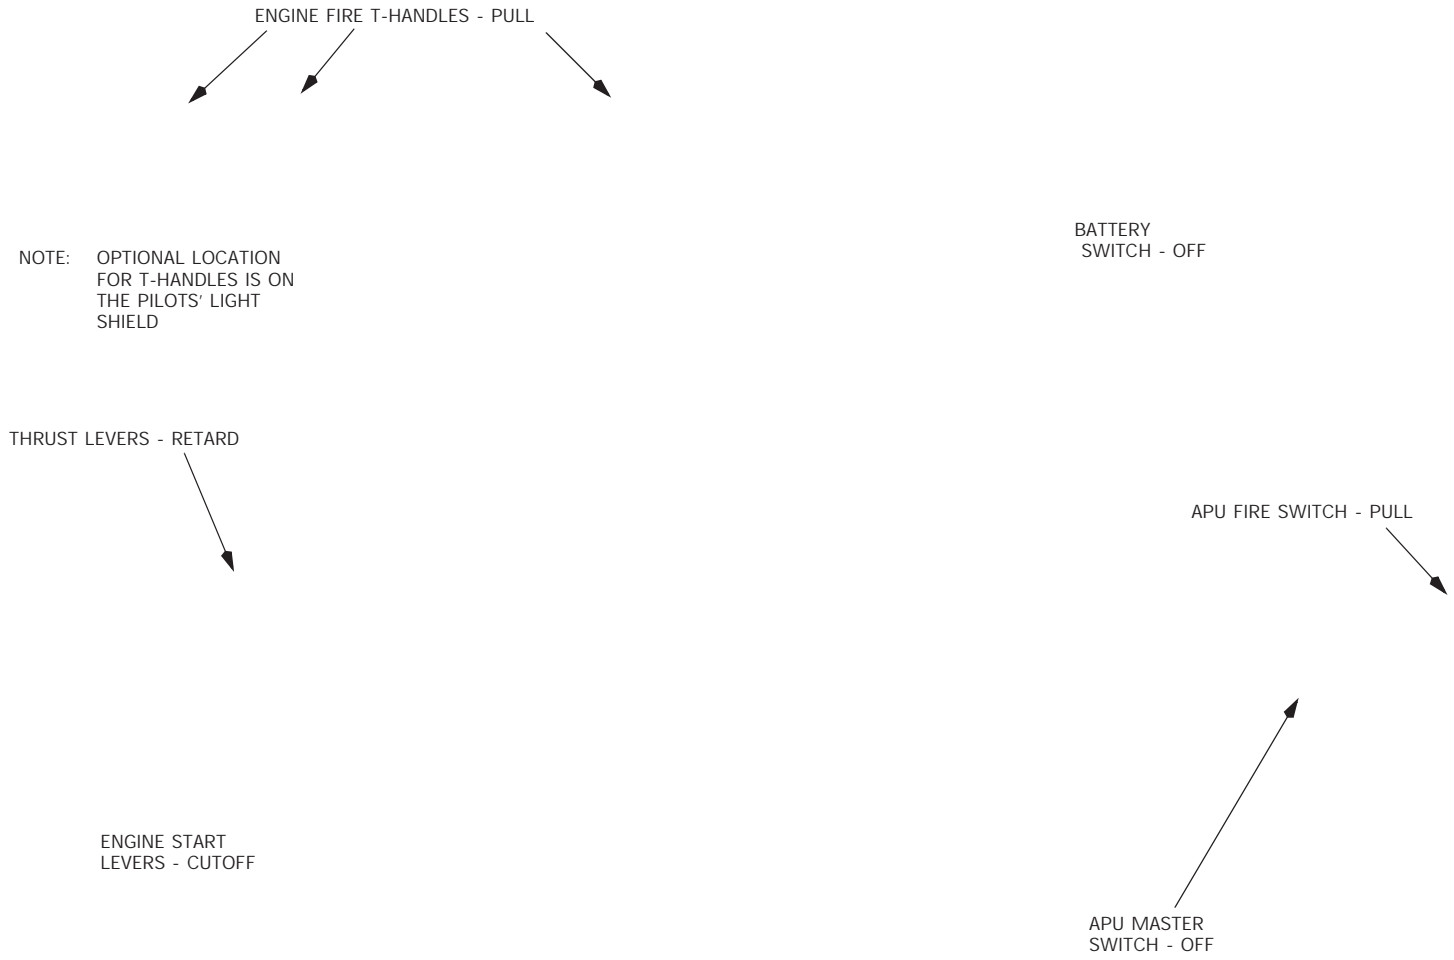

CRITICAL SWITCH LOCATIONS AND THEIR OPERATION ARE SHOWN WITH THE EXPANDED VIEWS OF THE CONTROL MODULES



720 & 720B SERIES

Intentionally Blank